


Roof Prism

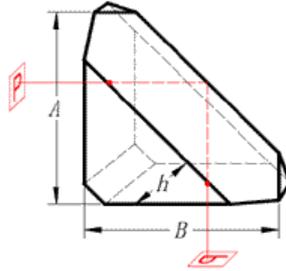

Amici prisms, also called "Roof prisms" or "Right angle roof prisms" revert and invert the image as well as bend the line of sight through a 90° angle. Ideal for use in spotting scopes, and any optical instrument where it is desirable to take an inverted image from an objective, turn it right side up, and bend it through a 90° angle in order to maintain the correct visual orientation.

Specification:

Material.....BK7 grade A optical glass
 Dimension Tolerance.....+0.0, 0.2mm
 Clear Aperture.....>90%
 Flatness..... $\lambda/2$ @632.8nm
 Surface Quality.....60-40
 Bevel.....<0.5mm×45°

P/N	A	B	h
20701	19.12	19.12	14.00
20702	27.40	27.40	20.00

- Demension unit:mm
- Other sizes and coatings are available upon request.